Stations Communication

Nano Stations incorporate different connectors on the back to share data with other devices. Increase your working possibilities.



ROBOT Connector

USB-B Port

The user can monitor and

stations from one PC (e.g.

JBC Software (available

install it onto the PC.

Use this port to connect the station with a JBC Fume Extractor in order to automatically activate extraction when the tools are in use.

Remotely control the station using an RS-232 connection with JBC Robot protocol.

P405 or P005 Pedal

Make the tool enter Hibernation or Sleep Mode by pushing down the pedal. This way you cause no thermal stress when placing the component onto PCB with the Nano Tweezers.



Specifications

Dimensions	$170 \times 90 \times 135 \text{ mm} / 6.69 \times 3.54 \times 5.31 \text{ in}$	
Weight	2.5 Kg / 5.4 lb	
Ref Voltage (AC)	NASE-9C / NANE-9C - 100V 50/60Hz	
	NASE-1C / NANE-1C - 120V 50/60Hz	
	NASE-2C / NANE-2C - 230V 50/60Hz	
Ouput peak power	14 W per tool	
Operating room temp.	10 - 50 °C / 50 - 122 °F	

Temperature range	90 - 450 °C / 190 - 840 °F
Idle Temp. Stability (still air)	\pm 1.5 °C (± 3 °F) / Meets and exceed IPC J-STD-001F
Tip to ground voltage / resistance	Meets and exceed ANSI/ESD S20.20-2014 IPC J-STD-001F
Connections	USB-A / USB-B / Pedal / RJ12 for Robots










When the highest precision is your priority



For applications requiring the highest precision

The best solution for soldering and desoldering very small-sized components such as chips 01005, 0201, 0402, etc.

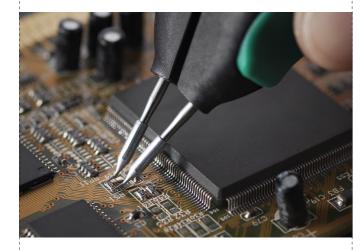

The most exceptional technology

- ▶ JBC has become the best choice for electronics professionals.
- See for yourself JBC Exclusive Heating System and its outstanding thermal performance.

TFT screen

The menu is intuitive and easy to use thanks to the improved interface usability. It allows you to personalize over 20 parameters to help manage the soldering process. Set temperature limits, check usage counters, lock the station parameters with a PIN or program Sleep & **Hibernation Modes**. The working screen shows the selected tool with its corresponding port, the working temperature of the tip and the power indicator at a glance.

Cleaning & extraction set (x2) It consists of a Tip Cleaning Stand and a **Quick Cartridge Extractor** which can be used single-handedly. Each set can accommodate a different cleaning system and allows you to organize cartridges according to the job. This means you save time and increase productivity. The cleaning system is replaceable and can be easily emptied.



C115 Cartridges for Nano Tools CONICAL C115106 **CONICAL BENT BEVEL** C115124 C115118 C115105 C115110 C115109 C115127 CHISEL C115108 C115125 CONFORMAL COATING REMOVAL SPOON **KNIFE** C115128 C115115 C115120

HIGH THERMAL PERFORMANCE

C115223

C115212

BLADE

C115111

C115214